

User Manual

Vitafit Bathroom Scale

ASIN: B0BZL5GWVL




Please read this User Manual carefully before using the device

Warning

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be made by children without supervision.
4. Model of battery that appliance used is 3xAAA.
5. Non-rechargeable batteries are not to be recharged.
6. Different types of batteries or new and used batteries are not to be mixed.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the appliance and safely disposed of.
9. If the appliance is to be stored unused for a long period, the batteries are removed.
10. The supply terminals are not to be short-circuited.
11. Take the scale, turn it over, open the battery compartment, put 3xAAA batteries according to the right polarities, then return the battery compartment cover.


First Time Setup

IMPORTANT! BEFORE USE: Remove the isolator tab from the battery compartment

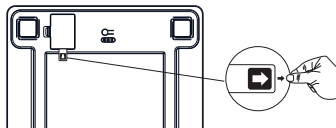


Weighing Operation


1. For best accuracy, place the scale on a hard and flat floor. Carpeted or uneven floors can negatively effect the accuracy.
2. The scale operates with step-on technology but will be calibrated automatically under following occasions.
 - A. when first time use, moving the scale or battery exchange, the scale will display scale itself weight, and appear "CAL" after around 1second, and then display "0.0" after around 2seconds, now it's ready to step on to weigh normally.




B. If step on the scale before calibration, the scale will display an wrong weight and appear "CAL" after around 1 second, and then display "0.0" after around 2seconds.



After calibration, please step on again to weigh and get correct weight.



3. Under other occasions, please step on to weigh directly.
4. Only when GREEN SIGNAL "  " displayed, it means weighing stable, please remain standing evenly on the scale without moving feet or body, and then can view precise measurements.




5. Step off the scale, the weight readings remain for several seconds. Then the scale will turn off automatically.

VERY IMPORTANT NOTICE: If the scale placed in a **NON-HORIZONTAL POSITION** Or **MOVED BEFORE WEIGHING**, please note there are two situations of measurements after stepping off the scale: 1. If "CAL" displayed after around 1 second and then display "0.0" after around 2 seconds, it means that the displayed weight is incorrect, please step on the scale again to get the correct weight; 2. If there is no "CAL" display after around 2 seconds, the displayed weight is correct.

Error Messages

If "Err" is displayed, the scale would be overloaded.

If "Err" is displayed, the weighing procedure failed, please repeat.



When you step on the scale to turn it on.

there is no display at all or "Lo" is displayed, try new batteries.



Safety Cautions



Keep the scale
off water



Don't put it on
uneven floor
while weighing



Use a wet cloth
To clean the scale



Keep the scale
with care



Don't step on the
edge of the scale



Slippery when wet

Specification

Capacity: Min. 5 kg/11lb/0.11lb
Max. 182kg/400lb/28st

Weight unit: kg/lb/st

Graduation: 0.05kg/0.1lb/0.1lb

Dimensions: 277x277x24mm

Platform: Tempered glass

Display: LED

Batteries: 3xAAA

Warranty Information

vitafit warrants all products to be of the highest quality in material, craftsmanship and service for a warranty of 3 years, effective from the date of purchase.

For more information please visit www.51vitafit.com, www.vitafit.com

Email: service@51vitafit.com

Notice:



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Vitafit

Inspired by Life



Factory: SHENZHEN SHINE INDUSTRIAL CO., LTD.
Address: 2&3F, Bldg5, 1st Industrial Zone, Changzhen Community,
Yutang Street, Guangming District, Shenzhen City, Guangdong
Province, China, 518132
E-mail: sales03@iascent.com.cn



Company: Apex CE Specialists GmbH
Address: Grafenberger Allee 277, 40237 Düsseldorf, Westfalen, Deutschland
Zip Code: 40237
Contact: Wells Yan
E-mail: info@apex-ce.com
Tel: +491776995991



Company: APEX CE SPECIALISTS LIMITED
Address: 6f East Union Street, Manchester, England, M16 9AE
Contact: Wells
E-mail: Info@apex-ce.com
Tel: +441616371080



FR

ÉLÉMENTS
D'EMBALLAGE
+ NOTICES



FR

Cet appareil
et ses piles
se recyclent



À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE

OU

Points de collecte sur www.quefairemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



Made in China